



CENTRIFUGAL CLUTCH

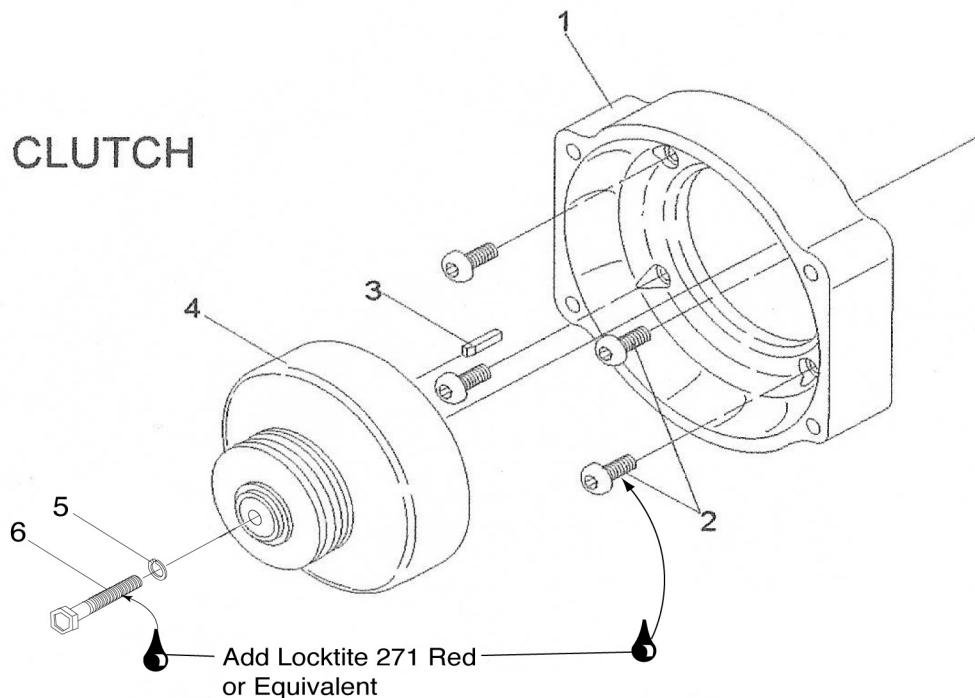


QUICK DISCONNECT ASSEMBLY

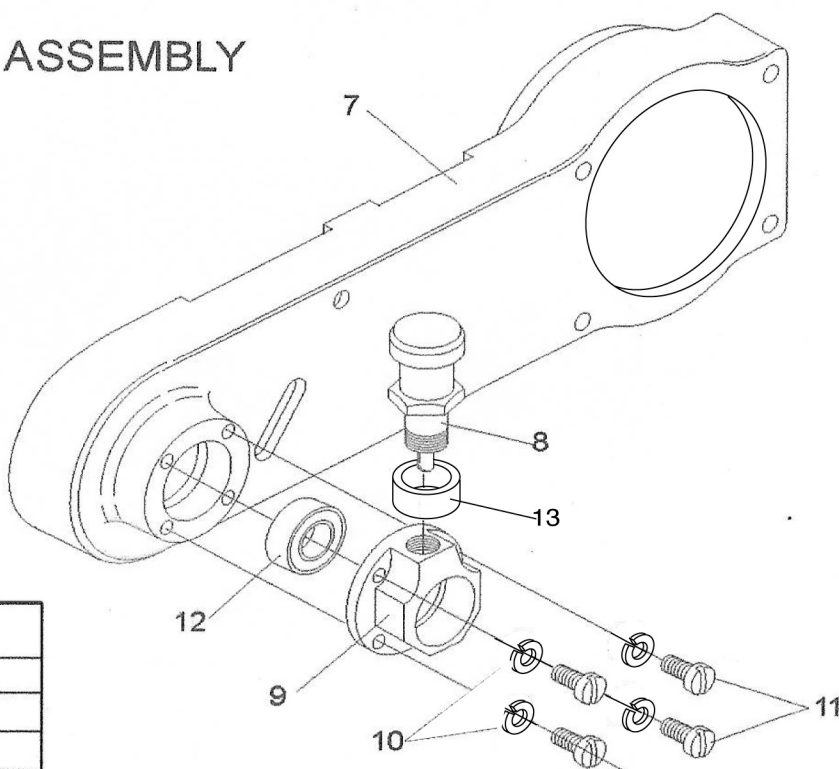


REF. No.	Part No.	Description
1	GBP0011	Clutch Housing
2	27030612	Screw
3	A4075	Alignment Key
4	GBP0013	Clutch Assem. V2
5	25703800	Split Lock Washer
6	10113921	Hex Head Cap. Screw
7	GBP0054	Drive, Housing
8	FSQR-2	Plunger, Indexing
9	GBP0045	Receiver, QR
10	25463400	Split Lock Washer
11	12143416-BK	Screw
12	BR129-B	Bearing
13	Spacer QR	Spacer, Plunger

Belt Housing Unit

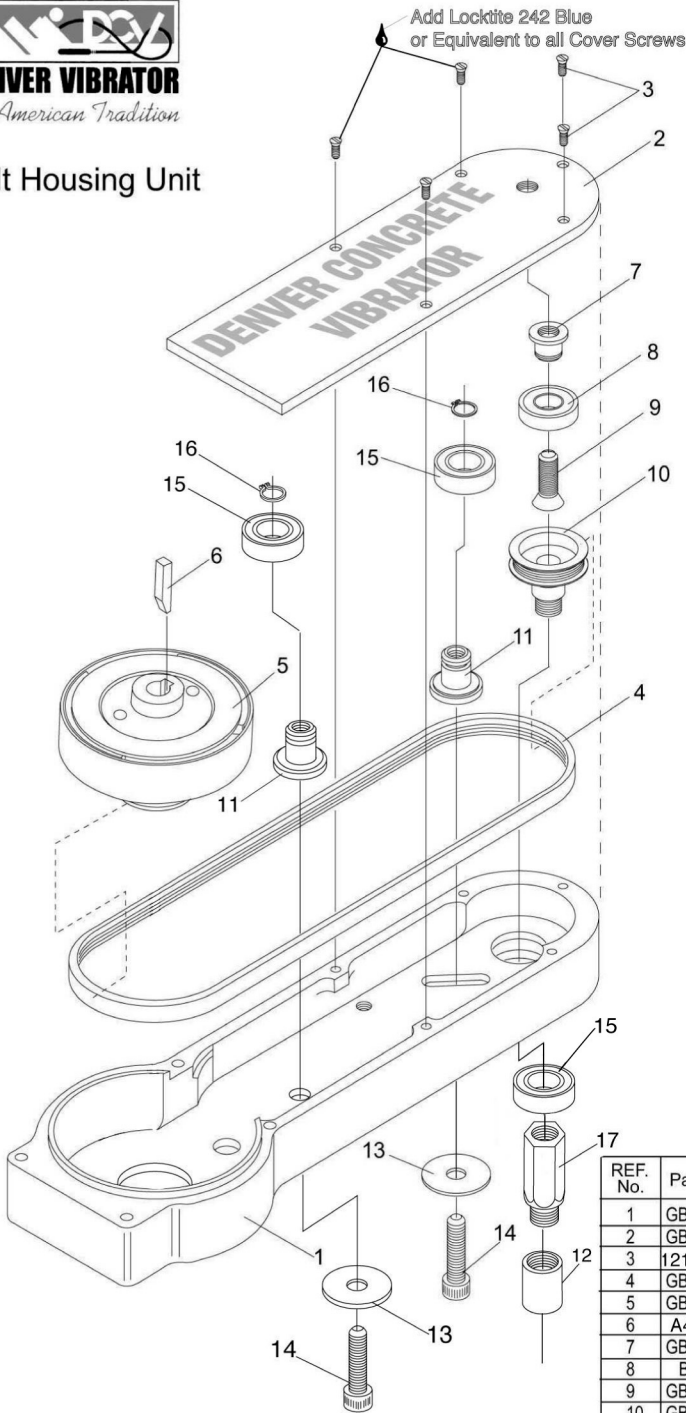



REF. No.	Part No.	Description
1	GBP0054	Drive Housing
2	GBP0056	Housing Cover
3	12123008-BK	Screw, Cover
4	GBP0030	Belt MicroV
5	GBP0013	Clutch Assembly, V2
6	A4075	Alignment Key
7	GBP0040	Stud, Driven Pulley
8	BR120	Bearing
9	GBP0302	Screw, Modified
10	GBP0042	Pulley, Driven
11	GBP0016	Stud, Idler Bearing
12	GBP0019-SQ	Driver
13	25004000	Washer
14	11014116	Bolt
15	BR129-B	Bearing
16	SN-A2517	Snap Ring
17	FP0010	Driver Extension

GBP Hinge Assembly

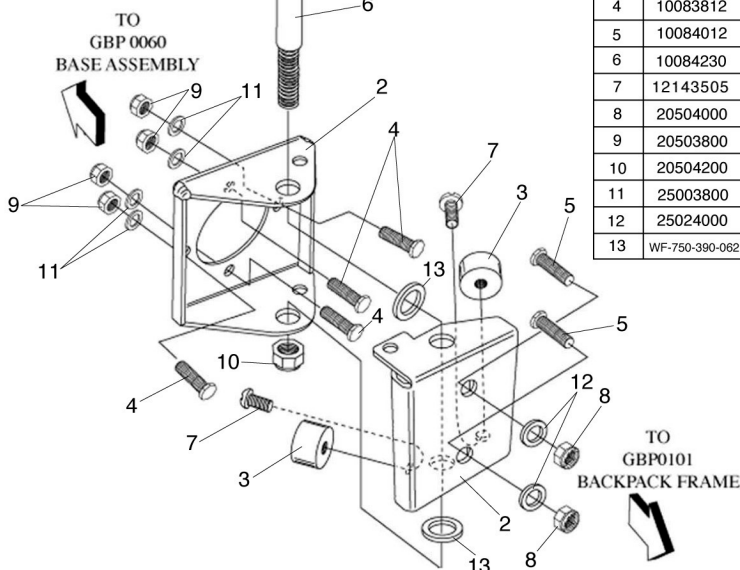


REF. No.	Part No.	Description
1	GBP0010-A	Female component
2	GBP0010-B	Male component
3	GBP0015	Metal core bumper
4	10083812	Hex cap screw
5	10084012	Hex cap screw
6	10084230	Hex cap screw
7	12143505	Pan slotted M/S
8	20504000	Nylon insert lock nut 5/16"
9	20503800	Nylon insert lock nut 1/4"
10	20504200	Nylon insert lock nut 3/8"
11	25003800	Washer 1/4"
12	25024000	Washer 5/16"
13	WF-750-390-062	Washer, Nylon

Engine Throttle Control Assembly

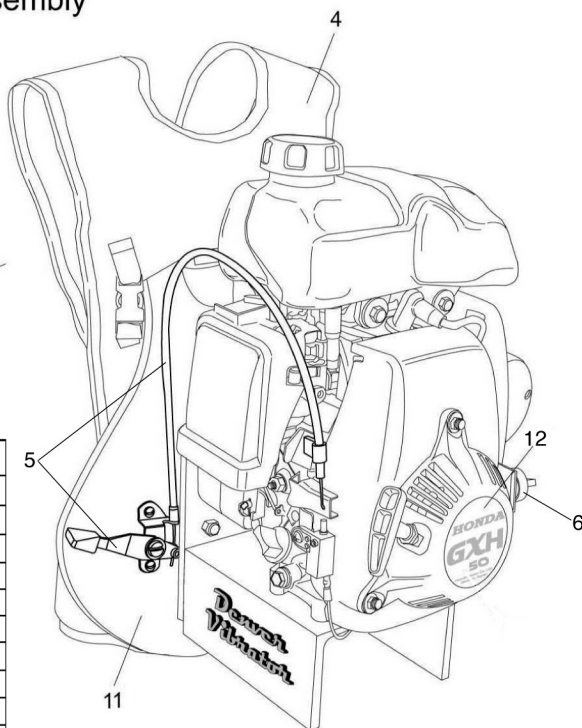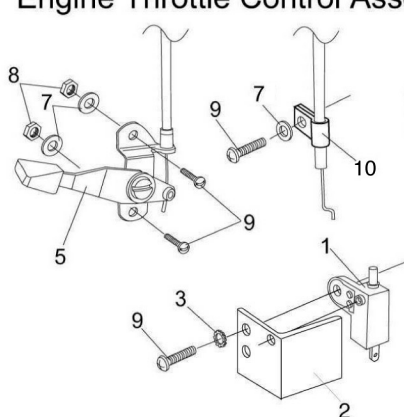

Ref. No.	Part Number	Description
1	HA 35120-ZL8-003	Switch, Travel
2	GBP0050	Protective Cover
3	25623000	#8 Lock Washer
4	GBP0201	Backpack Padding V2
5	GBP0023	Throttle Assembly V2
6	HA 36100-ZEI-015	Switch, Engine Stop
7	25623400	#10 Lock Washer
8	20063400	10-24, Nut
9	12103408	Round Slotted M/S
10	17087	Insulated Clip 3/16
11	GBP0101	Backpack Frame V2
12	GBP0017	Recoil Assembly Modified

Belt Housing & Base Mounting

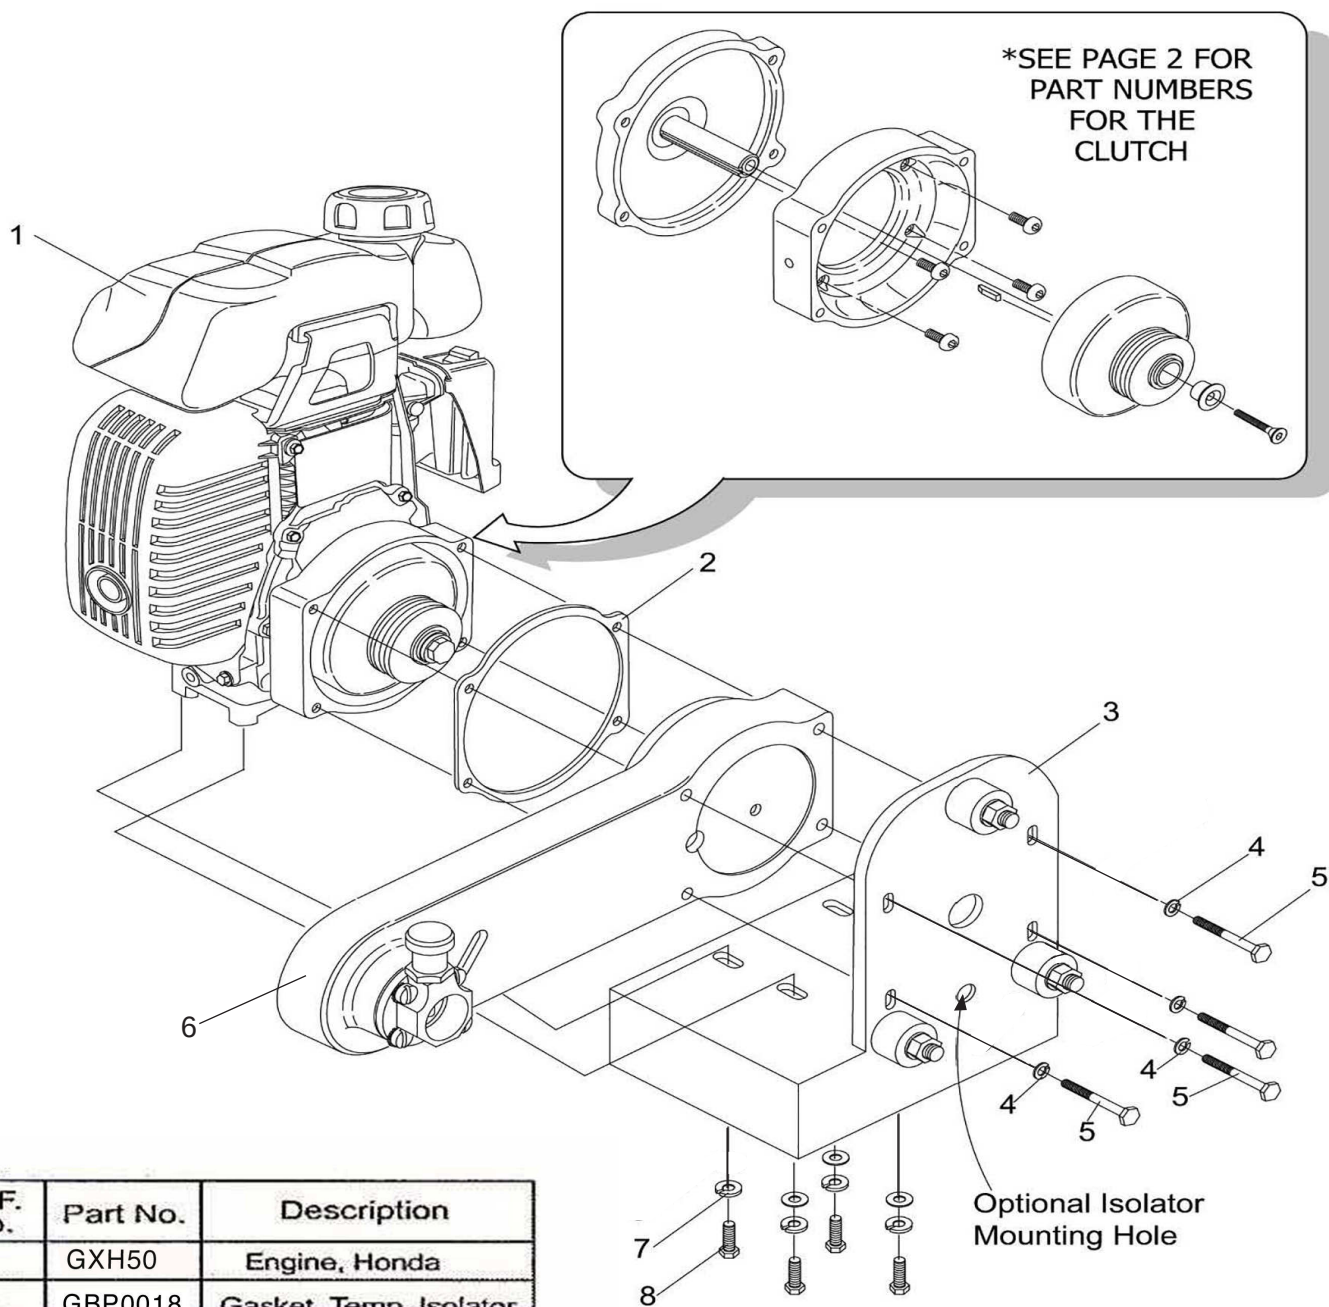

REF. No.	Part No.	Description
1	GXH50	Engine, Honda
2	GBP0018	Gasket, Temp. Isolator
3	GBP0060	Base Assembly
4	25463800	Washer, Split
5	10083823	Bolt, Hex Head
6	GBP0054	Drive Housing
7	26440600	Washer, Split
8	26020616	Bolt, Hex Head

PRE-START CHECKS


Checking and filling engine oil

DCV GBPH25 Backpack Vibrator

NOTICE: Your Warranty is VOID if the engine oil level is not maintained at the proper oil level.

The engine will not start with extremely low or no engine oil. Before each use, check the engine oil level and add as necessary.

- Ensure the engine is stopped and on a level surface.
- Close the fuel valve.
- Clean the top of the dipstick and surrounding area.
- Remove the dipstick by turning it counter clockwise and clean it with a clean, lint free rag.

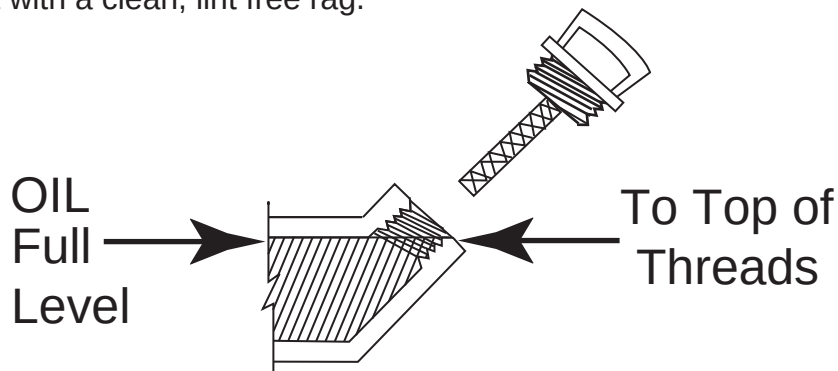

- If the oil level is below the top of the threads, add the appropriate type of oil until the oil is at the proper level, refer to illustration.
- SAE 10W-30 oil is recommended for general use.
- Replace the dipstick, turning it clockwise until sealed and snug.
- Open the fuel valve when ready to use again.